

INSTRUMENT APPROACH
CHART (IAC)

BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)



AD ELEV: 276'

RNAV (GNSS) Z RWY 08

D-ATIS	APP BOA VISTA 120.10 121.50		TWR BOA VISTA 118.10 121.50		GNDC NIL
N/A	FINAL CRS 079°	FAF 1910'	LNAV/VNAV DA / (OCH): 644' / (383')		LNAV MDA / (OCH): 700' / (440')

APCH Perda: Subir para **4000'**. Manter rumo **079°** até cruzar **1500'**. Então, curvar à ESQUERDA direto BV003 para espera.
Missed APCH: Climb to **4000'**. Maintain course **079°** until passing **1500'**. Then, turn LEFT direct to BV003 for holding.

RMK: 1) Para sistemas não compensados Baro-VNAV, LNAV/VNAV NAO AUTORIZADO abaixo de 0°C ou acima de 50°C. 1) For uncompensated systems Baro-VNAV, LNAV/VNAV NOT AUTHORIZED below 0°C or above 50°C.

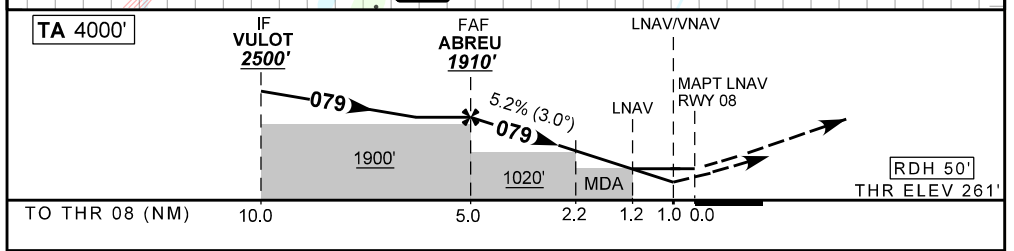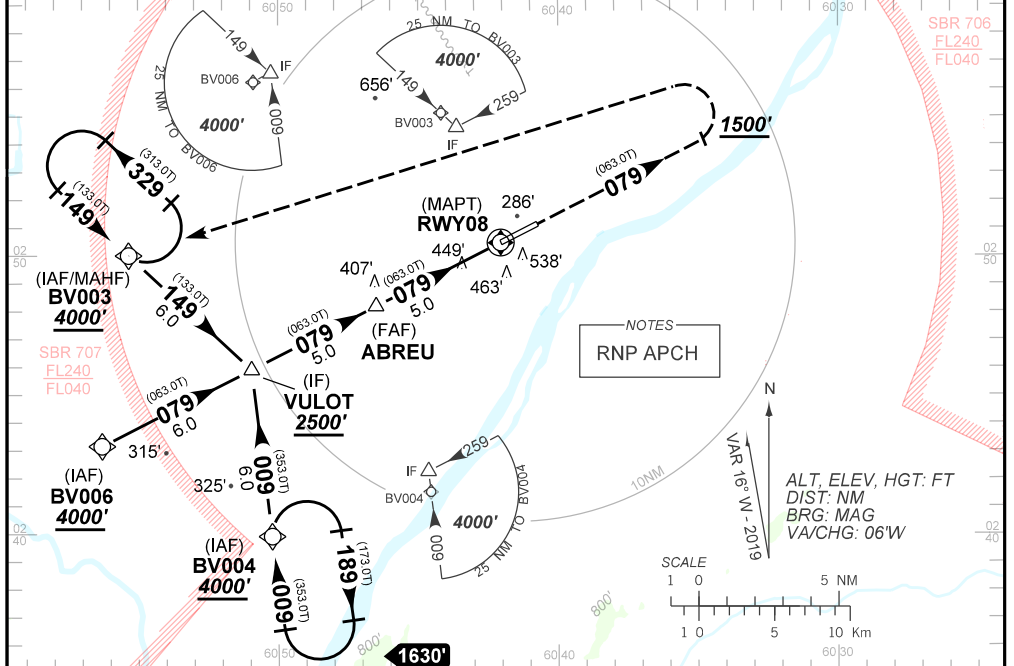

	ABREU	4.0	3.0	2.2	1.2	RWY08	KT	090	110	130	150	170	190
		1910	1585	1266	1020	700	FPM	500	600	700	800	900	1000
		1649	1324	1005	759	440	FAF-MAPT				NA		

STRAIGHT-IN	CAT	A	B	C	D	E
	DA / (OCH)	644' / (383')				
LNAV/VNAV	ALS/NO ALS/ RVR ALS (m)	800 / 1600 / 700			1100 / 1800 / 1000	
	MDA / (OCH)	700' / (440')				
LNAV	ALS/NO ALS/ RVR ALS (m)	800 / 1600 / 700			1300 / 2000 / 1100	
	MDA / (OCH)	NA				
CIRCLING	MDA / (OCH)	NA				
	VIS (m)	NA				

CHANGES: LAYOUT, MIN OPR. PROC.