

**INSTRUMENT APPROACH
CHART (IAC)**

**BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)
RWY 08**



AD ELEV: 276'

ILS U ou / or LOC U RWY 08

D-ATIS	APP BOA VISTA 120.10 121.50	TWR BOA VISTA 118.10 121.50	GNDC NIL
LOC IBV 109.30 MHz	FINAL CRS 079°	FAF 1930'	LOC ONLY
DA / (OCH): REFER TO MNM		MDA / (OCH): 740' / (480')	

APCH Perdida: Subir para **4000'**. Manter o rumo 079 até cruzar **1500'**. Então curvar à ESQUERDA proa 260 até interceptar RDL 313 BVI para espera em SUNDU.

Missed APCH: Climb to **4000'**. Maintain course 079 until passing **1500'**, LEFT turn on heading 260 until intercepting 313 BVI RDL for holding over SUNDU.

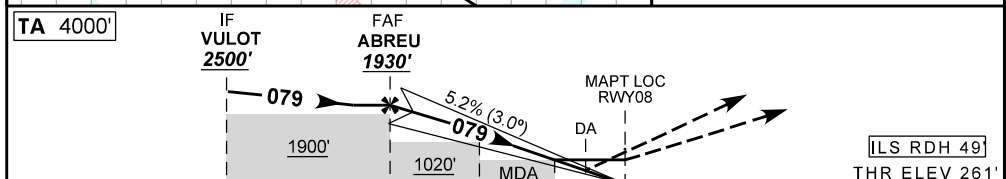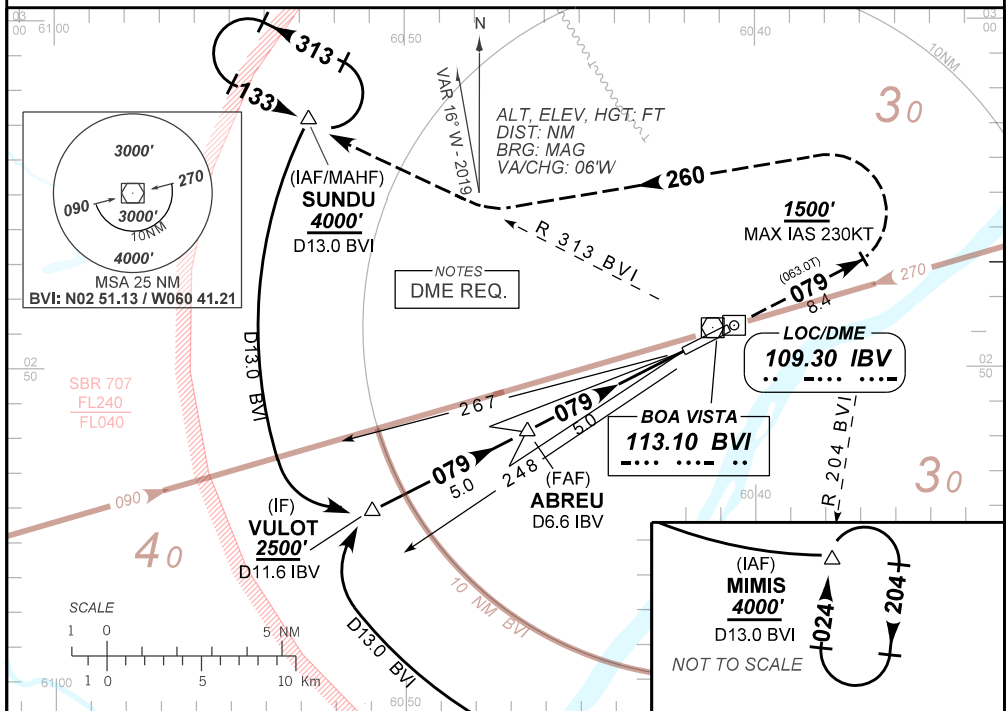

TO THR 08 (NM)	10.0	5.0	2.2	1.4	0.5	0.0	[ILS RDH 49] THR ELEV 261'
TO IBV (NM)	11.6	6.6	3.8	3.0	2.1	1.6	
ABREU	4.0	3.0	2.0	1.4	RWY08		
1930	1600	1280	960	740	ALT		
1669	1324	1004	684	464	(HGT)		
KT	090	110	130	150	170	190	
FPM	500	600	700	800	900	1000	
FAF-MAPT	NA						

STRAIGHT-IN	CAT	A	B	C	D	E
CAT I	DA / (OCH)	461' / (200')				688' / (430')
	ALS/NO ALS / RVR ALS (m)	800 / 1200 / 700				1300 / 2000 / 1100
LOC ONLY	MDA / (OCH)	740' / (480')				
	ALS/NO ALS / RVR ALS (m)	750 / 1600 / 700	800 / 1600 / 700	1500 / 2200 / 1400		
CIRCLING	MDA / (OCH)	NA				
	VIS (m)					

CHANGES: PROC. LAYOUT, DEC. FREQ. IDENT.