

**INSTRUMENT APPROACH
CHART (IAC)**

TAUBATÉ / Base de Aviação de Taubaté, MIL (SBTA)


AD ELEV: 1902'

RNAV(GNSS) RWY 08


ATIS NIL	APP NIL	TWR TAUBATÉ 119.90 121.50	GNDC TAUBATÉ 121.70
N/A	FINAL CRS 079°	FAF: 3660'	LNAV MDA / (OCH): 2460' / (560')

APCH Perdida: Subir para **6000'**. Manter rumo **079** até **3000'**. Após, curvar à DIREITA direto para TA004 para espera.
Missed APCH: Climb to **6000'**. Maintain course **079** until **3000'**. After, turn RIGHT direct to TA004 for holding.

RMK: NIL.

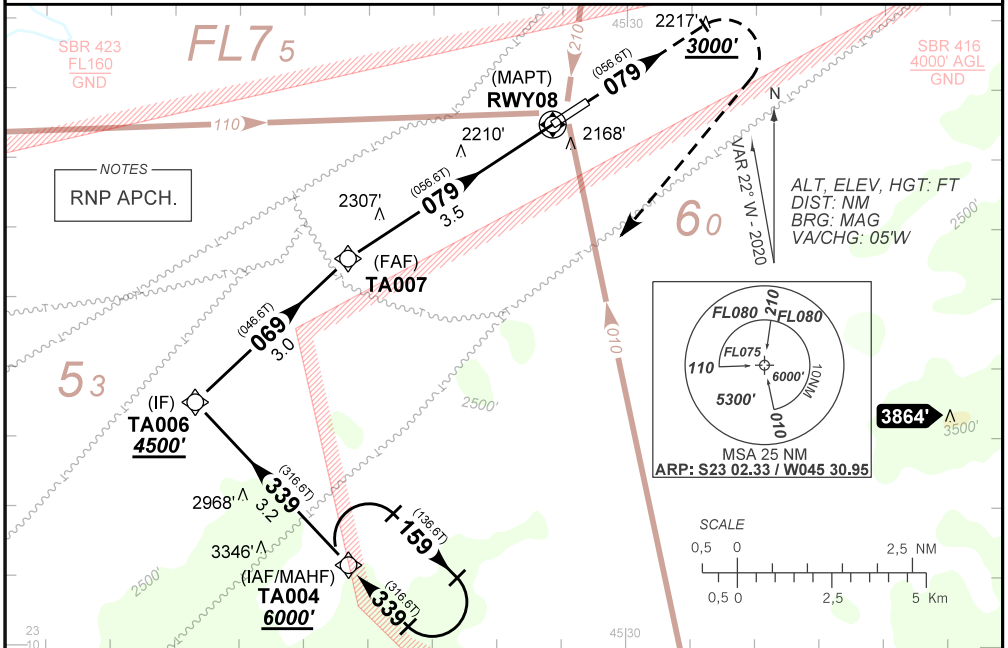

TA 6000'

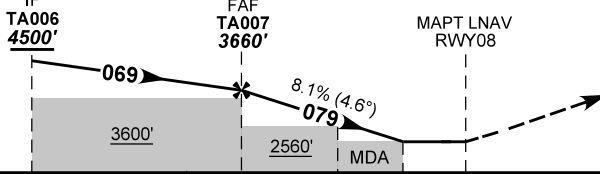

TO THR 08 (NM) 6.5 3.5 1.5 1.1 0.0

	TA007	2.0	1.5	1.1	RWY08	KT	060	070	080	090
	3660	2902	2675	2460	ALT	FPM	490	570	660	740
	1758	1000	773	560	(HGT)	FAF-MAPT	NA			

STRAIGHT-IN	CAT	H
	MDA / (OCH)	
LNAV	ALS/SNO ALS/ RVR ALS (m)	NIL / 800 / NIL
CIRCLING	MDA / (OCH)	NA
	VIS (m)	

CHANGES: NEW CHART.