

**INSTRUMENT APPROACH
CHART (IAC)**

BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)

VOR Z RWY 08



AD ELEV: 276'

D-ATIS	APP BOA VISTA 120.10 121.50		TWR BOA VISTA 118.10 121.50	GNDC NIL
VOR BVI 113.10 MHz	FINAL CRS 072°	FAF 1560'	N/A	VOR MDA / (OCH): 750' / (490')

APCH Perdida: Subir para **4000'**. Manter a RDL **072°** do VOR BVI até cruzar **1500'**. Então, curvar à ESQUERDA, na proa 240 para interceptar a RDL **290** do VOR BVI até DEXIV para espera.

Missed APCH: Climb to **4000'**. Maintain **072°** BVI VOR RDL until passing **1500'**. Then, turn LEFT, on heading **240** to intercept **290** BVI VOR RDL up to DEXIV for holding.

RMK: NIL.

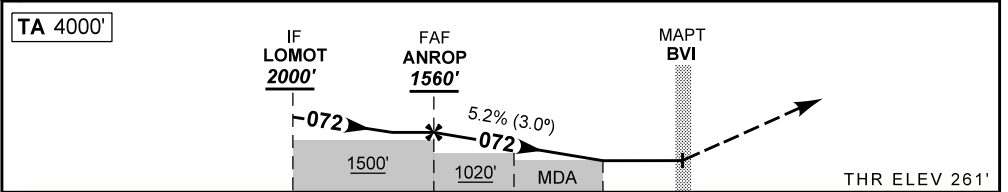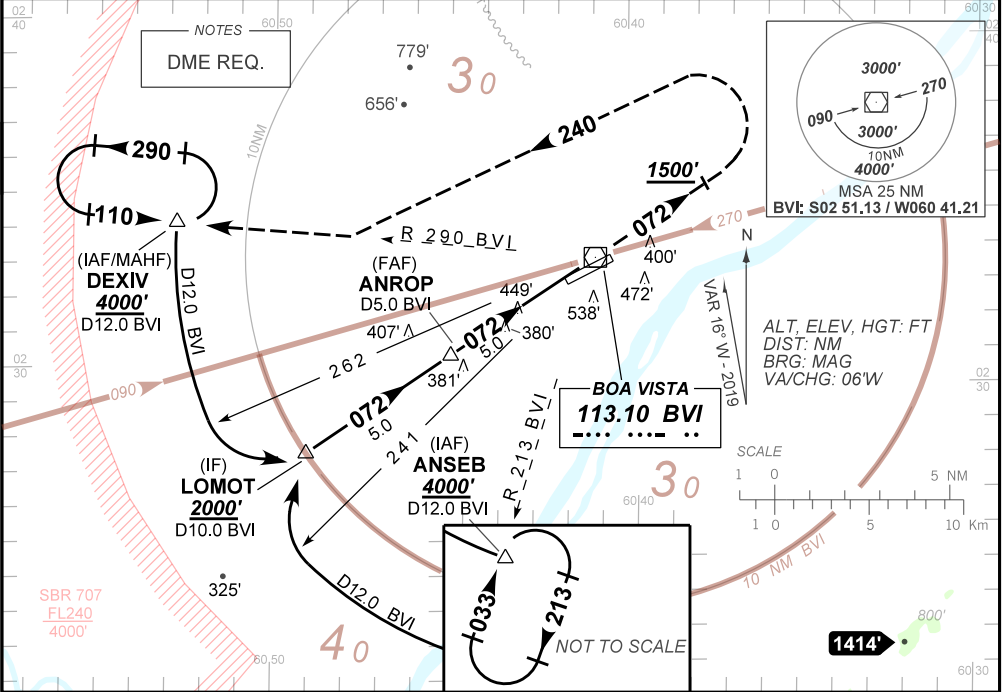

TO THR 08 (NM)	8.9	3.9	2.2	1.4	0.0
TO BVI (DME)	10.0	5.0	3.3	2.5	1.1

	ANROP	3.0	2.2	1.4	RWY08	KT	090	110	130	150	170	190
	1560	1266	1020	750	ALT	FPM	500	600	700	800	900	1000
	1299	1005	759	490	(HGT)	FAF-MAPT	NA					

STRAIGHT-IN	CAT	A	B	C	D	E
	MDA / (OCH)	750' / (490')				
VOR	ALS/NO ALS/ RVR ALS (m)	800 / 1600 / 700			1500 / 2300 / 1400	
	MDA / (OCH)	NA				
CIRCLING	MDA / (OCH)	NA				
	VIS (m)	NA				

CHANGES: ALT