


CARTA DE SAÍDA PADRÃO
 POR INSTRUMENTOS (SID)
 STANDARD DEPARTURE CHART
 INSTRUMENT (SID)

MACEIÓ / Zumbi dos Palmares (SBMO)
RWY 30
RNAV DENDO 1A - ENLUS 1A
IVSOR 1A - KIMAX 1A - UKARI 1A

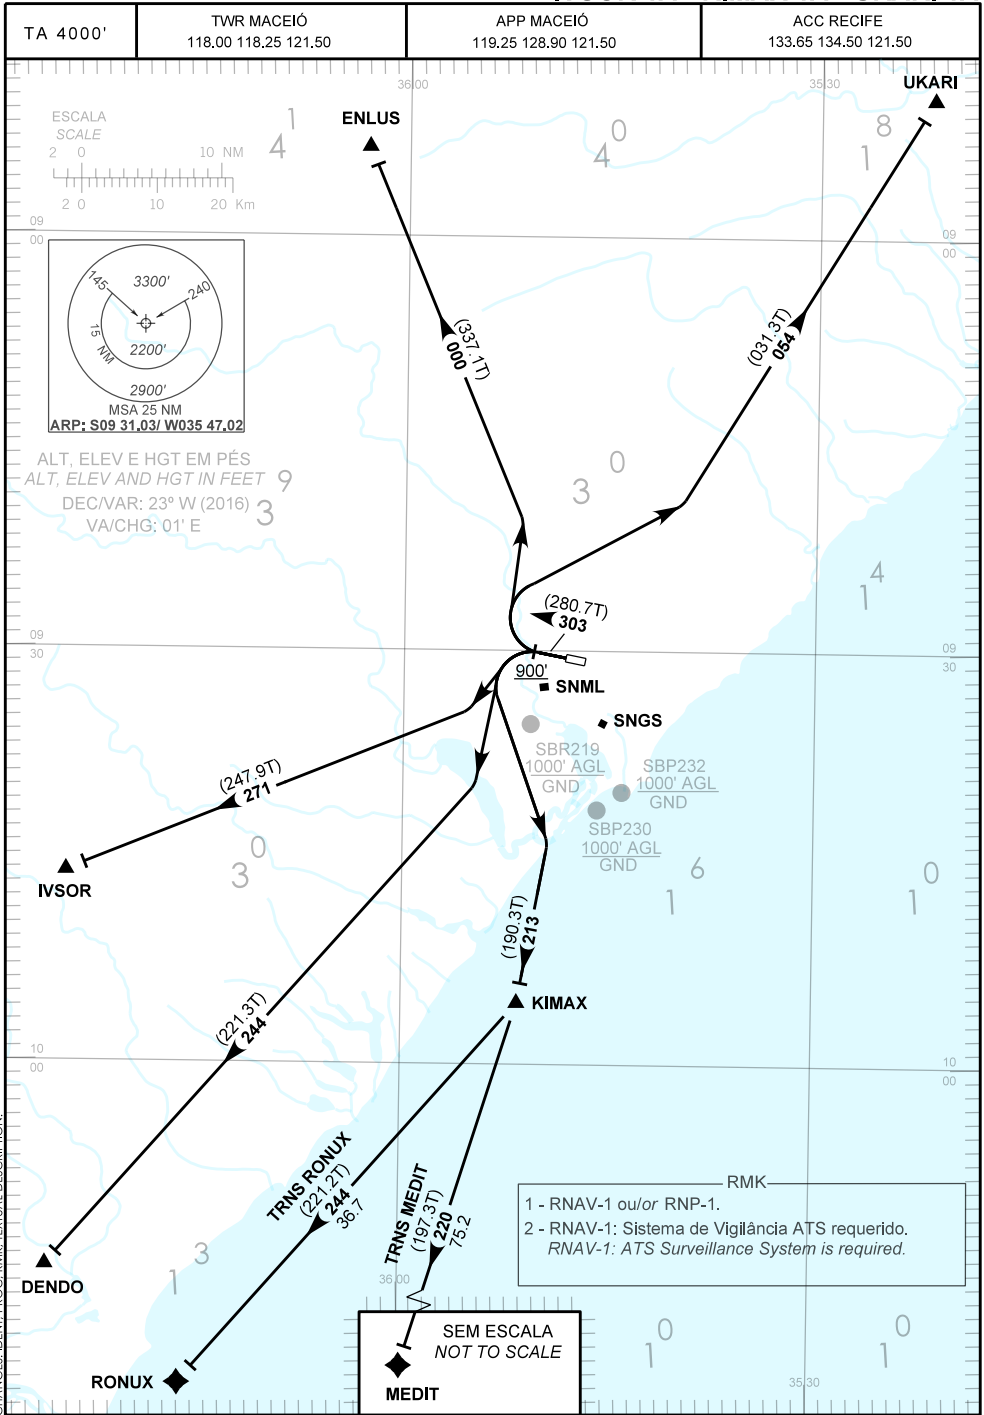

CHANGES: IDENT, PROC, RMK, TEXTUAL DESCRIPTION

DESCRIÇÃO TEXTUAL
TEXTUAL DESCRIPTION

RWY 30

SAÍDA DENDO 1A

Subir no rumo 303 até 900 pés. Curvar à esquerda, rumo 244 até DENDO.

SAÍDA ENLUS 1A

Subir no rumo 303 até 900 pés. Curvar à direita, rumo 000 até ENLUS.

SAÍDA IVSOR 1A

Subir no rumo 303 até 900 pés. Curvar à esquerda, rumo 271 até IVSOR.

SAÍDA KIMAX 1A

Subir no rumo 303 até 900 pés. Curvar à esquerda, rumo 213 até KIMAX. Então...

TRNS MEDIT: ...curvar à direita, rumo 220 até MEDIT.

TRNS RONUX: ...curvar à direita, rumo 244 até RONUX.

SAÍDA UKARI 1A

Subir no rumo 303 até 900 pés. Curvar à direita, rumo 054 até UKARI.

RWY 30

DENDO 1A DEPARTURE

Climb on course 303 to 900'. Turn left, course 244 to DENDO.

ENLUS 1A DEPARTURE

Climb on course 303 to 900'. Turn right, course 000 to ENLUS.

IVSOR 1A DEPARTURE

Climb on course 303 to 900'. Turn left, course 271 to IVSOR.

KIMAX 1A DEPARTURE

Climb on course 303 to 900'. Turn left, course 213 to KIMAX. Then...

MEDIT TRNS: ...turn right, course 220 to MEDIT.

RONUX TRNS: ...turn right, course 244 to RONUX.

UKARI 1A DEPARTURE

Climb on course 303 to 900'. Turn right, course 054 to UKARI.