

**INSTRUMENT APPROACH
CHART (IAC)**

BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)

AD ELEV: 276'



VOR Y RWY 26

D-ATIS	APP BOA VISTA 120.10 121.50		TWR BOA VISTA 118.10 121.50	GNDC NIL
VOR BVI 113.10 MHz	FINAL CRS 269°	FAF 1780'	N/A	VOR MDA / (OCH): 750' / (490')

APCH Perdida: Subir para **4000'**. Manter a RDL **269** VOR BVI até cruzar **1500'**. Curvar à DIREITA, proa **089** para interceptar a RD **050** VOR BVI até NENEN para espera.

Missed APCH: Climb to **4000'**. Maintain **269** BVI VOR RDL until passing **1500'**. Turn RIGHT, heading **089** to intercept **050** BVI VOR RDL up to NENEN for holding.

RMK: NIL.

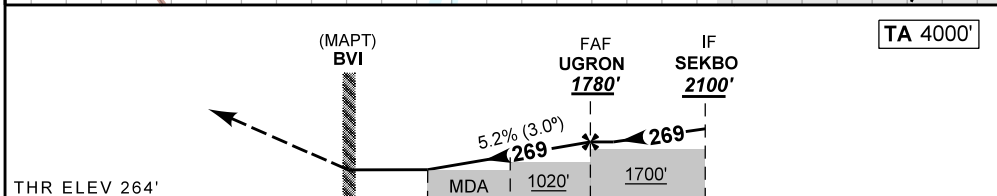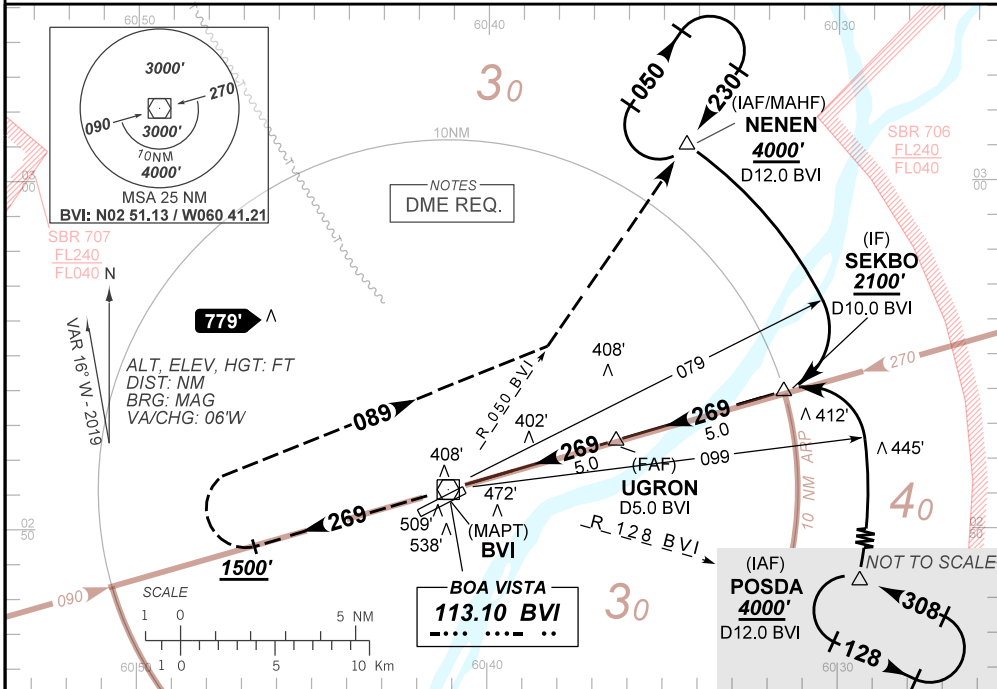

THR ELEV 264'	0.0	1.0	2.2	4.6	9.6	TO THR 26 (NM)
	0.4	1.4	2.6	5.0	10.0	TO BVI (DME)

RWY26	1.0	2.2	3.0	4.0	UGRON	KT	090	110	130	150	170	190
ALT	750	1150	1364	1630	1780	FPM	500	600	700	800	900	1000
(HGT)	490	886	1100	1366	1516	FAF-MAPT	NA					

STRAIGHT-IN	CAT	A	B	C	D	E
VOR	MDA / (OCH)	750' / (490')				
	ALS/NO ALS/ RVR ALS (m)	NIL / 1600 / NIL				NIL / 2300 / NIL
CIRCLING	MDA / (OCH)	NA				
	VIS (m)					

CHANGES: FAF.