

**INSTRUMENT APPROACH
CHART (IAC)**

BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)

AD ELEV: 276'



RNAV (GNSS) Y RWY 26

D-ATIS	APP BOA VISTA 120.10 121.50		TWR BOA VISTA 118.10 121.50	GNDC NIL
N/A	FINAL CRS 259°	FAF 1910'	LNAV/VNAV DA / (OCH): 595' / (331')	LNAV MDA / (OCH): 690' / (430')

APCH Perdida: Subir para **4000'**. Manter rumo **259°** até cruzar **1500'**. Então, curvar à DIREITA direto BV011 para espera.

Missed APCH: Climb to **4000'**. Maintain course **259°** until passing **1500'**. Then, turn RIGHT direct to BV011 for holding.

RMK: 1) Para sistemas não compensados Baro-VNAV, LNAV/VNAV NÃO AUTORIZADO abaixo de 0°C ou acima de 50°C.
1) For uncompensated systems Baro-VNAV, LNAV/VNAV NOT AUTHORIZED below 0°C or above 50°C.

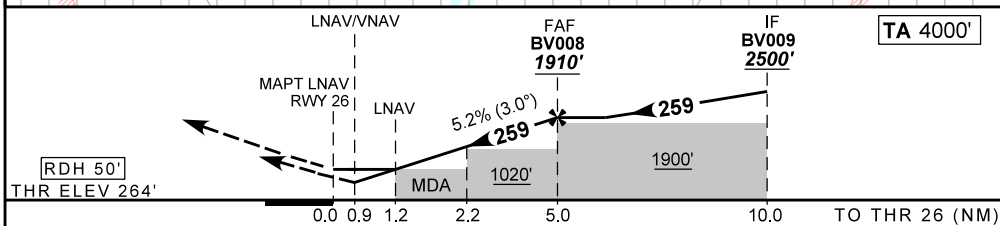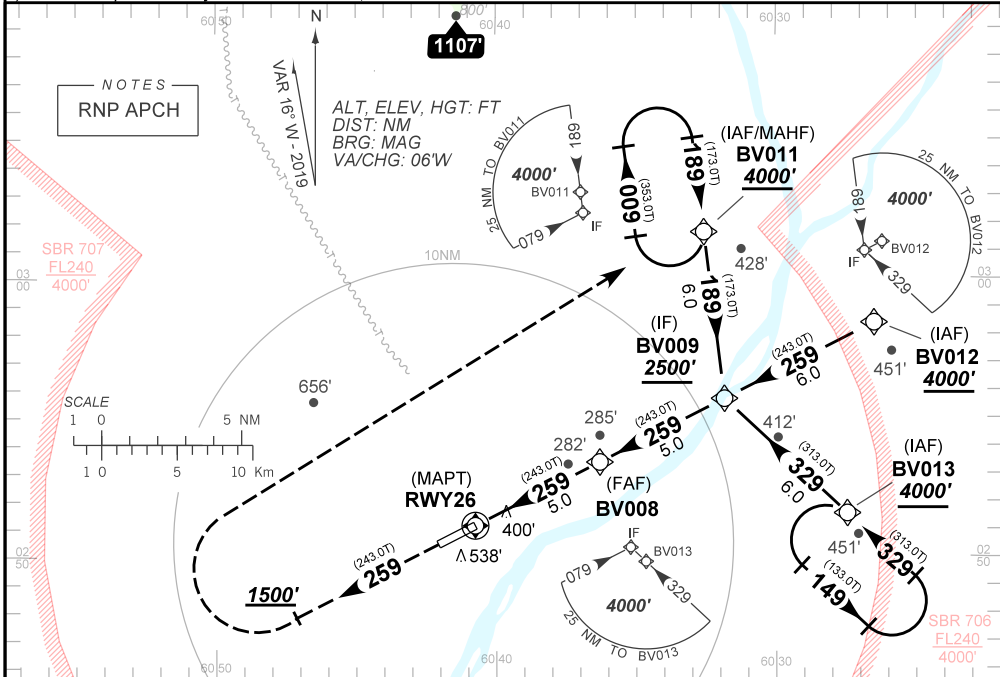

RWY26	1.2	2.2	3.0	4.0	BV008		KT	090	110	130	150	170	190
ALT	690	1020	1269	1588	1910		FPM	500	600	700	800	900	1000
(HGT)	426	756	1005	1324	1646		FAF-MAPT	NA					

STRAIGHT-IN	CAT	A	B	C	D	E
	DA / (OCH)	595' / (331')				
LNAV/VNAV	ALS/NO ALS/ RVR ALS (m)	NIL / 1600 / NIL				
	MDA / (OCH)	690' / (430')				
LNAV	ALS/NO ALS/ RVR ALS (m)	NIL / 1600 / NIL		NIL / 2000 / NIL		
	MDA / (OCH)	NA				
CIRCLING	VIS (m)	NA				

CHANGES: MIN OPR: